


Accessory Panel Installation Instructions

1. Mark panel cut-out onto surface as shown. Use appropriate tool to cut out rectangular opening.
2. Locate 4 hole centers as shown. Use a drill and 0.25 inch bit at hole centers. Minimum drill depth should be 0.40 inch below accessory panel bottom surface.
3. At each hole, use a flat blade screw driver to screw in supplied threaded inserts. (Telos # 1305-00007, E-Z LOK # 400-M4). Threaded inserts should be flush with mounting surface when completely installed.
4. Use supplied screws (Telos # 1301-00103) to mount Accessory panel to surface.

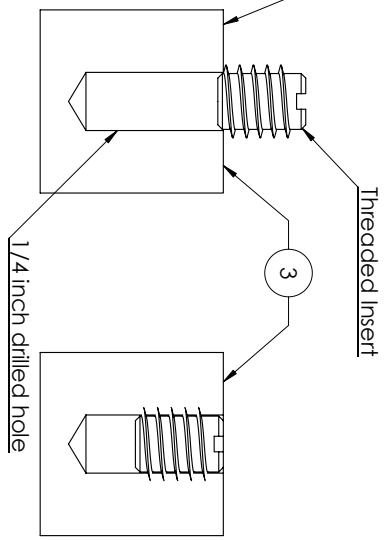

Drawing Notes:

1. Dimensions in inches[millimeters].
2. All dimensions are centered on template and panel part.

DWG REV		ECH NO		DATE		BNG DFT		APPR BY		DESCRIPTION		
101	N/A	11-14-06	SK	SK	XX	INITIAL RELEASE						
<p>MERIC DRAWING(mml) DIMENSIONAL TOLERANCE UNLESS OTHERWISE SPECIFIED XX = ±.30 XXX = ±.012 .XX = ±.03</p> <p>PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF TELOS SYSTEMS. ANY REPRODUCTION OR TRANSMISSION OF THIS DRAWING WITHOUT WRITTEN PERMISSION OF TELOS SYSTEMS IS PROHIBITED.</p>												
TELOS SYSTEMS 2101 SUPERIOR AVE. 4th FLOOR CLEVELAND, OH. 44114				ELEMENT ACCESSORY PANEL INSTALLATION INSTRUCTIONS				DWN. BY SK		DATE 11-14-06		REV
								SCALE: 1:1		SHEET 1 OF 1		101